

---

## activeGate Software Installation Read Me File

activeGate Software and Drivers are available via download from the Synventive website at [Synventive.com](http://Synventive.com). Before you download the software and drivers you will be required to register with Synventive. After registration, download the User Guide for detailed instructions about installing the drivers and software. When the software and drivers have been downloaded and saved to the hard drive, run the driver application following the Wizard prompts. Next, run the installation setup. exe file and follow the Wizard prompts.

### Note

You **MUST** have local administrative rights to install Synventive software.

### Download Site Link

See Chapter Five of the User Guide for detailed information about any of the following procedures.

### Download Procedure

- 1) Go to [www.synventive.com/software.aspx](http://www.synventive.com/software.aspx) for software access.
- 2) Select **Download** User Guide.
- 3) Select **Download** User Software.
- 4) New users are required to register with Synventive before downloading Software. Use the link in the Login dialog box to register with Synventive.
- 5) An e-mail containing initial login information and a link to the Synventive site will be sent to your e-mail address.
- 6) Login to the Synventive Software Download site.
- 7) Select **Download** User Software and save to Desktop.
- 8) Select **Download** Drivers and save to Desktop.
- 9) Install Drivers and Software